

TICKETFLEX AUTO GUN BOARD KIT

INSTALLATION INSTRUCTIONS FOR SEGA INFRA RED GUNS (THE LOST WORLD).

CONNECTOR PINOUT

THE FEMALE 4 PIN CONNECTOR

PIN1
PIN 2 BLACK = GROUND
PIN 3
PIN 4 ORANGE = +12V

CONNECTOR GUN 1 (MALE 4 PIN)

PIN 1 BLUE TRIGGER OUTPUT
PIN 2
PIN 3 WHT TRIGGER INPUT
PIN 4

CONNECTOR GUN 2 (MALE 4 PIN)

PIN 1 BLUE TRIGGER OUTPUT
PIN 2
PIN 3 WHT TRIGGER INPUT
PIN 4

DIP SWITCHES = ALL OFF.

CONNECTION TO THE GUN SENSE BOARD

